




**VOICE ALARM A/B-CEILING LOUDSPEAKER
FOR FIRE DETECTION AND ALARM SYSTEMS**

RGS8FTABX/EN



The RGS8FTAB series is made of metal, highly efficiency, and contains two independent 3,5" speaker drivers with 2x 6 W transformer. RGS8FTABX/EN includes 2x plastic terminals. This speaker contains a metal firedome, it has an improved mounting system with 3 spring clamps with cropped leg springs, increased clamp force and shortened tension distance. This allows a quick and easy mounting. The high quality broadband chassis and transformer make part of the chassis. The grill can be removed from the front side.

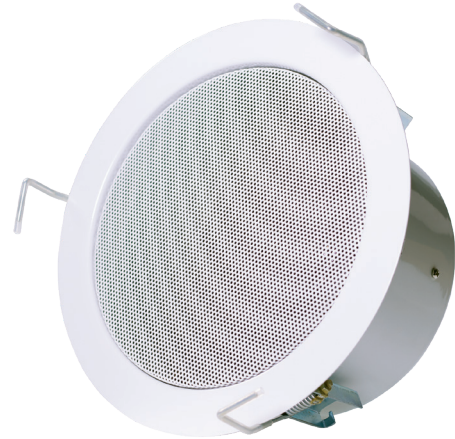

**EN54-24:2008
0905-CPR-00636
TYPE A**

● Standard	Compliant to EN54-24
● Electrical	
Rated power, Watts	2 x (6)
Tappings 100 Volt line, Watts	2 x (6/3/1.5/0.75/0.25)
Transformer Impedance, Ohms 100 Volt	2 x (1.67k/3.33k/6.66k/13.3k/40k)
Tappings 70.7 Volt line, Watts	2 x (3/1.5/0.75/0.375/0.125)
Driver impedance, Ohms	2 x (8)
Effective Frequency Range, Hz (BSEN60268-5)	300 - 17,500
S.P.L. @ 1 m, 1 Watt, dB, Octave, 100 Hz-10 kHz	82
S.P.L. @ 1 m, Full power, dB, Octave, 100 Hz-10 kHz	92
S.P.L. @ 4 m, 1 Watt, dB, 1/3 Octave, 100 Hz-10 kHz	82
S.P.L. @ 4 m, Full power, dB, 1/3 Octave, 100 Hz-10 kHz	90
Dispersion at 1k/2k Hz, Degrees	147/66 Horizontal 151/73 Vertical
● Environmental	
IP-rating	21
Min/Max amb temp	-10°C to 55°C
Relative humidity	≤95%
● Mechanical	
Dimensions	Ø265 x 107
Net weight, kg	2.15
Colour (Unless Specified)	White, RAL9016
Material	Steel, White Paint
Mounting	Bayonet System with 3 spring
Cut-out, mm	Ø238
Safety	X represent plastic terminal and without fuse



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info@ateis-europe.com







INSTALLATION GUIDE


RGS8FTABX/EN

EN54-24:2008
0905-CPR-00636
TYPE A

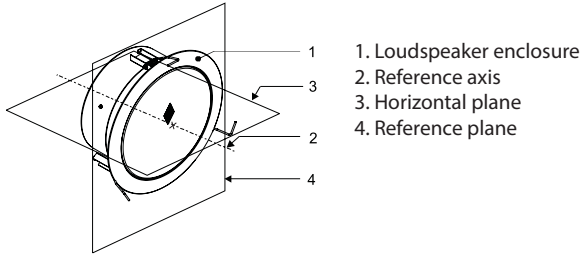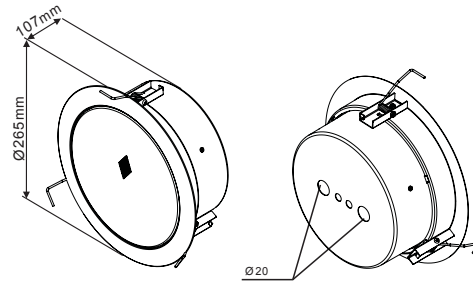


With Transformer:
100V/70V line

	White wire plus tapping						Black
100V	0.25W	0.75W	1.5W	3W	6W	COM	
70V	0.125W	0.375W	0.75W	1.5W	3W	COM	
IMP (Ω)	40K	13.3K	6.66K	3.33K	1.67K		

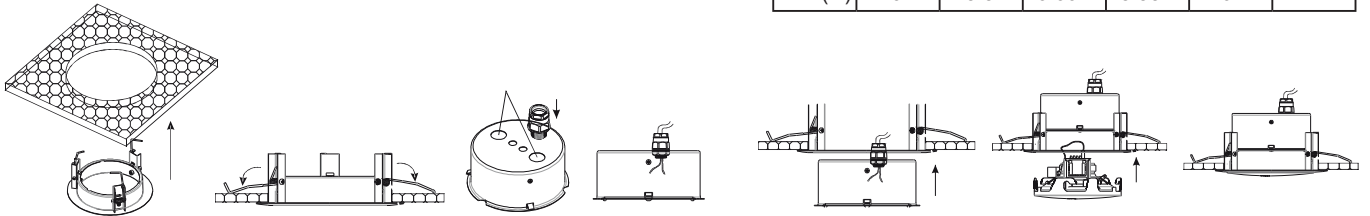


- 1) Cut a 238mm diameter hole paying attention to ensure that the cutout is accurately made. As if it is not, the speaker may not fit correctly into the ceiling preventing the speaker from sitting flush to the surface. Remove the grille (including the Speaker Technology) by simply unscrewing and then pulled out of the outer ring.
 - 2) The springs have now pushed up and to the provided holders are engaged.
- Warning: Pay particular attention that the springs now be energized by an uncontrolled and flick down, there is a risk of injury.
- 3) Gland the installation cable into the fire dome using a suitably 20mm gland. Insert the fire dome to the outer ring by aligning the notches on the fire dome to the black cylindrical dots on the outer ring. Once the fire dome is properly installed, the springs on the fire dome will engage and lock onto the outer ring.

- 4) Connect the speaker to the cable with your required watt as shown on the circuit diagram.
- 5) Insert the speaker to the outer ring horizontally, rotate speaker till it mount on the cylindrical dots of the outer ring.

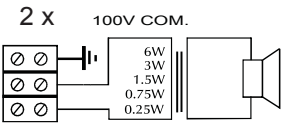

Circuit Diagram
RGS8FTABX/EN

X: represent plastic terminal and without fuse

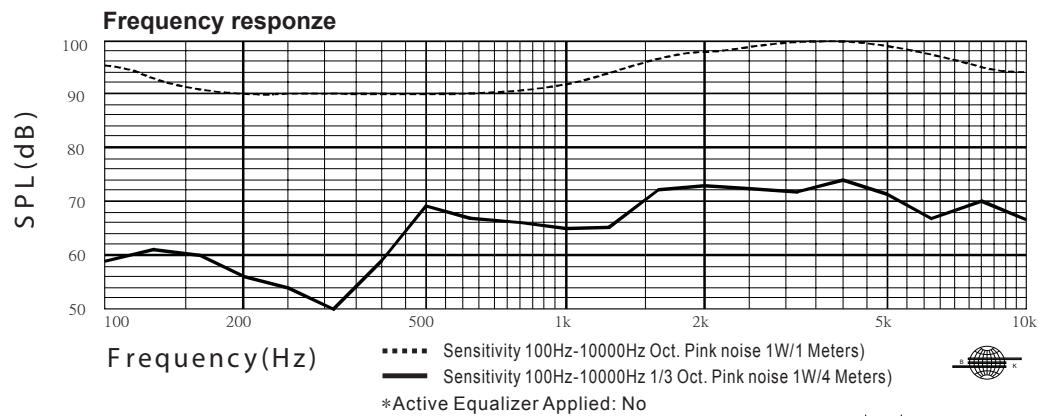

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info@ateis-europe.com

